



OUTDOOR SWITCH

User Manual

Table of Contents

- In The Box3
- System Requirements.....3
- Getting Started.....3
- Unit Mounting.....3
- Unit Set Up4
- iDevices® Connected App4
- Connecting Your Outdoor Switch5
- Using The Product.....5
- Problem Solving.....6
- Factory Reset6
- Light Bar Color Codes.....7
- Rating Information.....7
- Regulations8
- References.....10

In The Box

Inside your Outdoor Switch box, you will find:

- 1 iDevices® Outdoor Switch
- 1 Quick Start Guide
- 1 Mounting Screw

System Requirements

- iPhone® 4S and later
- iPad® 3rd generation and later
- iPad mini™ and later
- iPod touch® 5th generation and later
- HomeKit™ requires an iPhone, iPad, or iPod touch with iOS 8.1 or later
- Wi-Fi® 2.4GHz 802.11 b/g/n compatible network
 - Router Security Settings Supported: WPA, WPA2, or None
- iDevices® Connected app version 2.0 or higher




Getting Started

Unit Mounting

- Remove the Outdoor Switch from packaging
- Note 8 digit pin located on the back of the unit and on the Quick Start Guide

- Plug your Outdoor Switch into a grounded wall outlet and let the unit hang down freely
- Note approximate location of hang tab, remove the Outdoor Switch and install the mounting screw, such that the weight of the unit rests on the mounting screw and not the power cord
- Plug the Outdoor Switch back into grounded wall outlet and install onto the mounting screw, ensuring the weight of the unit is on the screw and not the power cord
- Ensure Outdoor Switch plug receptacles are facing downward
- Reference figure below for installation

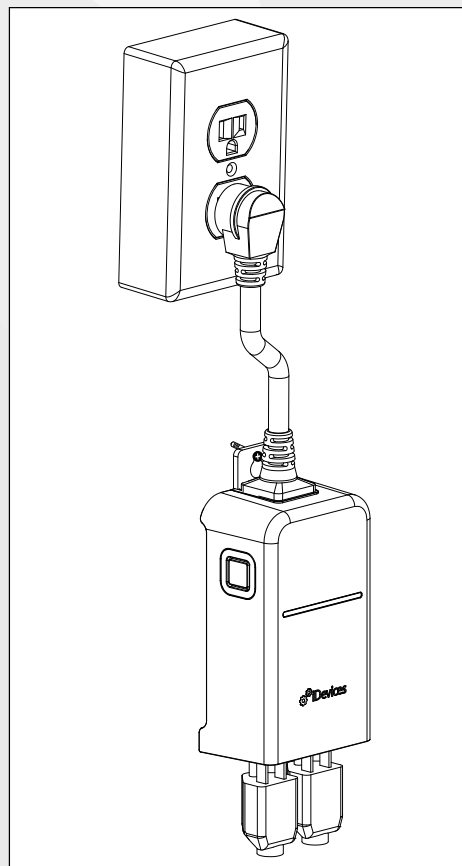

Unit Set Up

- Once plugged in, the Outdoor Switch will blink blue, indicating it is ready to pair
- An accessory (e.g. string lights, fountain, etc) can be plugged in at any time

iDevices[®] Connected App

- Ensure your iOS device's Wi-Fi[®] is turned on and is connected to your home Wi-Fi[®] Network
 - 2.4 GHz b/g/n networks are compatible

- 5 GHz networks are not compatible
- Download the iDevices® Connected app from the App StoreSM

Connecting Your Outdoor Switch

- Open the iDevices® Connected app
- Available products will be shown at the top of the app
 - If you don't see your device, check to see if the blue setup indicator on the Outdoor Switch is blinking fast or slow. If blinking slow, hold button down for 5 seconds, release, and confirm fast blink.
- In the app, find the Outdoor Switch you'd like to connect and tap the add icon
- Confirm your home network.
- The Outdoor Switch will turn solid blue to indicate it has successfully joined your home network
- If this is your first HomeKit™ product, the app will walk you through creating a home and a room. If you already have a home set up, the app will skip this step.
- To ensure the app is adding the correct product, the app will ask you to confirm its identity. The LED on the Outdoor Switch will blink purple to indicate it is the new product being added.
- When prompted, enter the 8 digit pin previously noted on the Quick Start Guide or back of the Outdoor Switch. On iOS 9, you can scan the pin with your camera, instead of entering it manually.
- The app will now walk you through setting up your iDevices® Outdoor Switch
- Once set up, you will be able to quickly control the product within the app, or using Siri®. To learn about all the additional features, check out the iDevices® Connected app manual for HomeKit™.

Using The Product

- Once the Outdoor Switch is initially set up, the LED will remain off unless it needs to show a status issue

- Clicking the button on the side of the unit will manually turn the Outdoor Switch on or off

Problem Solving

The following information covers some of the most common troubleshooting issues with the iDevices® Outdoor Switch. If you'd like more detail about your Outdoor Switch and its capabilities, please visit our support site at idevicesinc.com/Support, or give us a call at 888.313.7019.

What do I do if an unexpected error occurs during initial setup?

First, try quitting the app by double clicking the home button and sliding the app upwards. Unplug the Outdoor Switch from the outlet and plug it back in. If the LEDs flash green, reopen the app and proceed with the on-screen instructions. If the LEDs do not flash green, perform a Factory Reset.

Factory Reset

To reset the Outdoor Switch to its factory condition, hold down the button for 10 seconds. When the unit flashes red, the button can be released. The LED will then flash white, and restart the pairing sequence with a fast blue blink.

I'm experiencing issues with the iDevices® Connected app.

The iDevices® Connected app requires iOS 8.1 or greater. To learn about all the additional features, check out the iDevices Connected app manual for HomeKit™.

I don't have a device to pair to my Outdoor Switch, can I still use it?

You will have the ability to manually turn the Outdoor Switch on and off using the button located on the side.

Light Bar Color Codes

MODE	DESCRIPTION
Pairing Mode	The accessory is waiting for the handset to configure the accessory's Wi-Fi®. The LEDs flash blue .
Pairing	The accessory is waiting for the handset to initiate and complete pair set up through either Wi-Fi® or BLE. The LEDs are solid blue .
Pairing Expired	Pairing mode has expired and the accessory is waiting for the user to press the button for about 3 seconds to reenter pairing mode. The LEDs slow flash blue .
Pairing Restart	To reinitiate the pairing mode, hold the button down for 3 seconds and the LEDs will rapidly flash blue .
Wi-Fi® Link Up	When the accessory joins a Wi-Fi® network, (e.g. the link is up), the LEDs rapidly flash green for a second .
Wi-Fi® Link Down	When the accessory has lost the connection to the Wi-Fi® network, (e.g. the link is down), the LEDs slow flash orange until the link is up .
Factory Reset	To initiate a Soft Factory Reset, which will clear all Wi-Fi® and pairing information, hold the button down for 10 seconds until the LEDs rapidly flash red . When the button is released the unit will reboot and reenter the pairing mode.
Identify	When the accessory receives a request to identify itself, it rapidly flashes purple .
Normal Operation	The LEDs are OFF once the unit is set up and operating properly.

Rating Information

UL Rated to UL STD 244A & STD 916
Listing: E470483

Input: 125VAC, 60 Hz
Output: 125VAC, 60 Hz
General Purpose: 1200W (10A)

Rated for rain-tight operation when mounted per Sec 3.

This product is not to be used by children or persons with reduced physical, sensory or cognitive capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Children should be supervised and instructed not to play with this product.

Regulations

Product Information:

Manufacturer: iDevices® LLC

Model: IDEV0004

FCC ID: 2ABDJ-SWITCH4

IC: 11569A-SWITCH4

Important Safety Instructions:

When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.

FCC Compliance Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information To The User:



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement Caution: This transmitter must be installed to provide a separation distance of at least 20 cm from all persons.

Canada – Industry Canada (IC)

This device complies with Industry Canada license-exempt RSS Standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes:

(1) Cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interference, y compris celles pouvant causer un mauvais fonctionnement de l'appereil.

IC RF Radiation Exposure Statement Caution: This transmitter must be installed to provide a separation distance of at least 20 cm from all persons.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

References

Requires the iDevices® Connected app

For warranty information please visit iDevicesinc.com/Warranty

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App store is a service mark of Apple Inc. HomeKit is a trademark of Apple Inc.