


## WIRING DIAGRAM

### Power Extender Kit thermostat wiring.

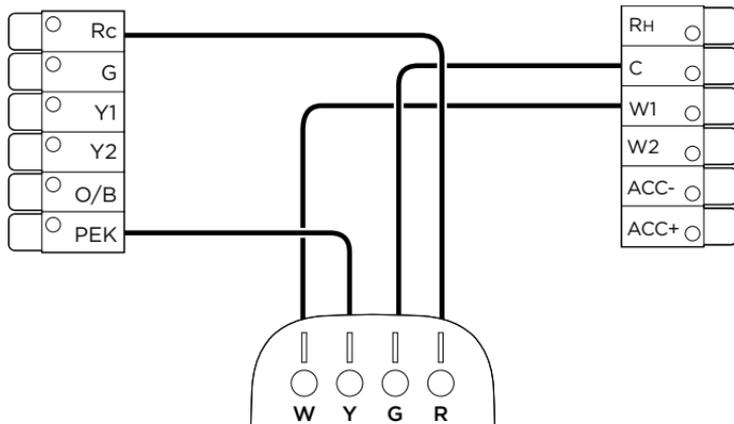

**NOTE** Do not connect any jumper wires between Rc and Rh. ecobee does this automatically. The R wire needs to go into the Rc terminal on your ecobee.