

Quick-Start Guide

KEYPAD TABLETOP ENCLOSURE

For Model : (2402WH or 2402BK)

Thank you for choosing to make your lighting control simple, affordable and reliable.

Your Keypad Tabletop Enclosure contains:

- Enclosure cover and base
- 2 enclosure screws
- 3 wire nuts
- Power cord
- Strain-relief grommet



INSTEON™ is a simple, reliable, and affordable breakthrough in home control. Simple, because Plug-n-Tap™ setup is a breeze, and there are no wires to add — INSTEON uses existing powerline wiring as well as radio frequency for communication. Reliable, because every INSTEON device is a two-way repeater. An INSTEON home grows in value with every INSTEON device you add, truly making life more convenient, safe and fun.

Need Help? For assistance call your friendly support person @ 800-762-7846



Step 1.

Unpack enclosure and verify contents (see above).



Step 2.


Install a wire nut on the red (or load) wire to prevent shorting or causing a shock.

Step 3.

Remove the 2 screws already attached to your KeypadLinc™; these will not be used.

Step 4.

Thread the stripped wire end of the power cord through the hole in the base of the enclosure so that 6-8 inches of the power cord wires are available from inside the enclosure.

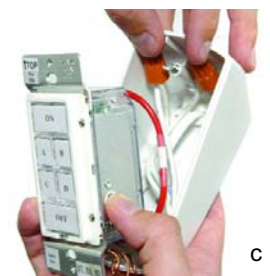

Step 5.

Attached strain-relief grommet to power cord as shown in figure a (small side toward enclosure). Compress strain-relief grommet (pliers recommended) and insert snugly into enclosure's power cord hole.

Step 6.

Locate the wires labeled "neutral" on both the power cord and KeypadLinc. Using a wire nut, connect these two wires together. (figure b)

Step 7.

Locate the wires labeled "line" on both the power cord and KeypadLinc. Using a wire nut, connect these two wires together.

Step 8.

Install KeypadLinc into enclosure so that wire nuts are tucked into large end of enclosure behind KeypadLinc's mounting plate. (figure c)

Step 9.

Install front cover (lid) of the enclosure, over the KeypadLinc, to the base of the enclosure. From the bottom of enclosure, insert enclosure screws through 2 screw holes and tighten (figure d) into front cover until front cover is snug against enclosure base.



Step 10.

Plug the power cord into a convenient outlet (preferably unswitched). www.smarthome.com/2486dqs.pdf "Setting up your Keypad Dimmer to control an INSTEON Device Remotely".

Step 11.

Configuration and Operation – Please see the Quick Start Guide for your KeypadLinc for instructions.

Congratulations! Your KeypadLinc is ready for linking.

SmartLabs Limited Warranty

SmartLabs warrants to the original consumer of this product that, for a period of one year from the date of purchase, this product will be free from defects in material and workmanship and will perform in substantial conformity to the description of the product in the owner's manual. This warranty shall not apply to defects or errors caused by misuse or neglect.