



1-800-355-0157 LOCK PROGRAMING SHEET HF Deadbolt Lock Sets

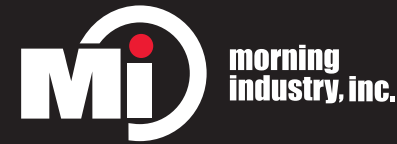

- S** Set Button
- C** Cancel Button
- P** Program Button

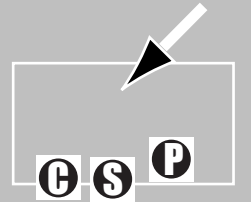

Set A Code

1. Open the battery cover.
2. Press the Set Button (S) and listen for 1 beep.
3. Enter desired code on keypad (2- 8 digits within 5 seconds), then press the unlock button on the keypad.
4. Engage lock by pressing the lock button on the keypad.
5. Test the lock by entering code then pressing the unlock button.
6. Repeat procedure 2 & 3 to enter up to 6 new user codes.

Delete Programed Code(s)

1. Press the Cancel Button (C) and listen for 1 beep.
2. To delete a single code, enter the desired code to be deleted, then press the Unlock Button on the keypad until you hear 2 confirmation beeps.
3. **To delete all codes**, press and hold the Cancel Button (C) until you hear 2 confirmation beeps.
4. To add new code or codes, see "Set A Code".

Lock function will NOT operate without any pre-programed code(s).

1. **TO LOCK:** Press Lock Button on the keypad
2. **TO UNLOCK:** Enter code then press Unlock Button on the keypad.
3. **REMOTE:** Works up to 30ft away. (without obstructions). Range decreases with obstructions.

Warranty

Lifetime Warranty on Exterior Finish • 25 Years Mechanical Warranty • 1 Year Limited Electrical Warranty

Morning Industry Inc. warrants to the original residential user of this product that it will be free from defects in materials and workmanship, under normal use, for 1 year from the date of purchase. User must provide a copy of original purchase receipt. This warranty Does Not Cover abuse or misused products or products used in commercial applications. All mechanical components carry a limited warranty, for a period of 25 years from the date of purchase. The Finish of the exterior of this lock carries a limited warranty of the lifetime of the unit against deterioration due to normal weather conditions. This warranty does not apply to locks that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.)

This warranty is limited to repairing or replacing of this lock only at Morning Industry Inc.'s sole discretion. Morning Industry Inc. will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. To Implement this warranty, please enclose a copy of purchase receipt, day and night time telephone number, and a check or money order of \$10.00 for Shipping & Handling.

Please return the lock with the above information with S+H Charge freight prepaid to:
Morning Industry Inc. Attn: Returns Dept. 270 S. 5th Ave. La Puente, CA 91746

Morning Industry thanks you for your business and invites you to check out the new and exciting products on our web site: <http://www.morningindustry.com>

TROUBLESHOOTING PAGE

BEFORE TROUBLESHOOTING, MAKE SURE YOU USE NEW PREMIUM ALKALINE BATTERIES

1 During programming or at anytime a row or column on the keypad does not beep, disconnect the white connector and check the connection for any bent, pushed back or damaged pins. Fix any pins that may have been misaligned by holding wire and gently push back in place, then reconnect. If it still does not beep, call us immediately at 800-355-0157.

2 Upon completion of programming your new lock the motor does not engage, then check your battery for proper installation (all the way in and in right position) and replace if not a new set of **Premium Alkaline Batteries**. If it still does not engage call us immediately at 800-355-0157.

DEADBOLT PROBLEMS:

A *Will not move/jammed* - If your lock only works with the key and not the back thumb turn, the FLAT DRIVER BAR is not inserted correctly - refer back to instruction sheet and picture #2, you will need to remove the front cylinder assembly and rotate the bar 180 degrees and reinsert it. If the lock still will not operate correctly, call us

B If the lock and unlock mechanisms work in reverse THEN change the position of the 1 and 2 switch.

C If the lock partially engages then retracts - Then the clutch should be reset by holding the thumb turn in the unlock position and pressing the lock button on the keypad.

METAL DOOR INSTALLATION:

On metal door applications it may be necessary to install a thin piece of insulation between the door and the back module of the unit. This more applicable to remote control, RF, models.

IF LOCK STILL DOES NOT OPERATED PROPERLY, ANY PART IS MISSING OR DAMAGED, CALL CUSTOMER SERVICE

Morning Industry thanks you for the business and invites you to check out the new and exciting products on our web site: [morningindustry.com](http://www.morningindustry.com)

PAGINA DE DIAGNOSTICO DE PROBLEMAS

ANTES DE DIAGNOSTICAR UN PROBLEMA CERCÍORSE DE QUE ESTÉ UTILIZANDO UN JUEGO NUEVO DE BATERIAS ALCALINAS PREMIUM

1 Durante la programación o en cualquier momento que una fila o columna en el teclado numérico no emita un pitido, desconecte el conector blanco y revise la conexión para asegurarse de que ningún pin este doblado, muy atrás o dañado. Fije cualquier pin que pueda estar desalineado sosteniendo el cable y empujando suavemente hacia atrás colocándolo en su lugar, después, conéctelo de nuevo. Si todavía no emite ningún pitido llámenos inmediatamente al 800-355-0157.

2 Si al terminar de programar su nueva cerradura, el motor no responde, entonces revise su batería para instalarla apropiadamente (hágalo completamente hacia adentro y en la posición correcta) y reemplácelas si no son un juego nuevo de Baterías Alcalinas Premium. Si todavía no responde llámenos inmediatamente al 800-355-0157.

PROBLEMAS CON EL PESTILLO:

A *No se mueve/atascado* - Si su cerradura sólo trabaja con la llave y no con la roseta de atrás, la BARRA PLANA CONDUCTORA no ha sido insertada correctamente- consulte la hoja de instrucciones y la foto #2, usted necesitará remover el ensamblaje anterior del cilindro, darle un giro a la barra de 180 grados y luego reinsertarla. Si la cerradura todavía no opera correctamente llámenos.

B Si los mecanismos de abrir y cerrar de la cerradura trabajan al revés ENTONCES cambie la posición del interruptor 1 y 2.

C Si la cerradura se activa parcialmente y luego se retrae - El embrague deberá ser restaurado, sosteniendo la roseta en la posición abierta, y presionando el botón de bloquear "Lock" en el teclado numérico.

INSTALACIÓN DE LA PUERTA DE METAL:

En las aplicaciones de las Puertas de Metal será necesario instalar un pedazo delgado aislador entre la puerta y el módulo de atrás de la unidad. Esto es más aplicable para los modelos de control remoto y RF.

SI LA CERRADURA TODAVIA NO OPERA APROPIADAMENTE, LE FALTA ALGUNA PARTE O ESTÁ DAÑADA LLAME AL SERVICIO DE ATENCIÓN AL CLIENTE